

FIG. 3

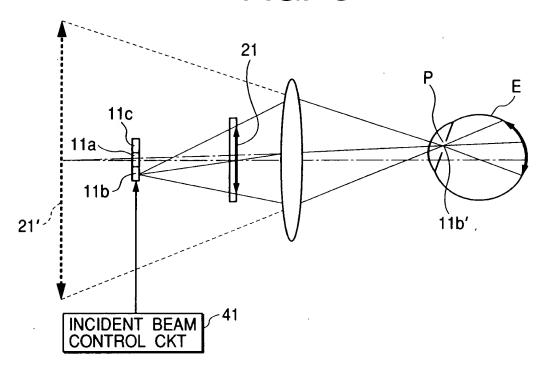
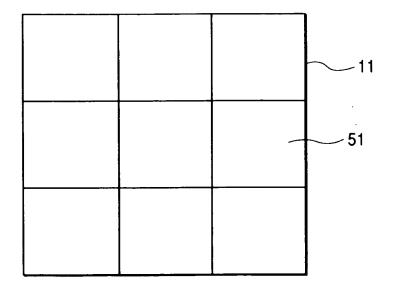
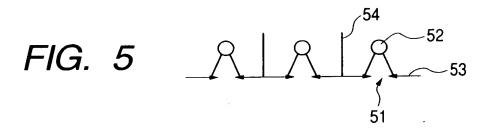
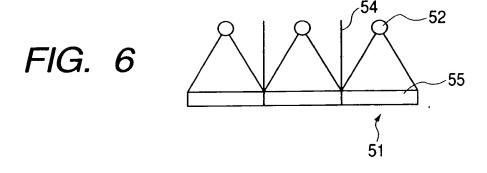



FIG. 4









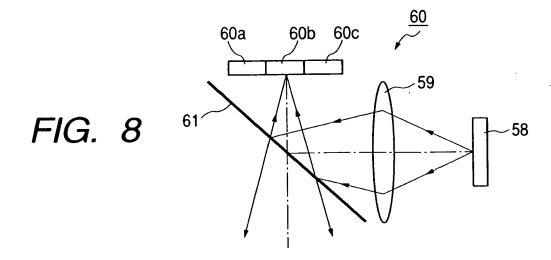


FIG. 9A

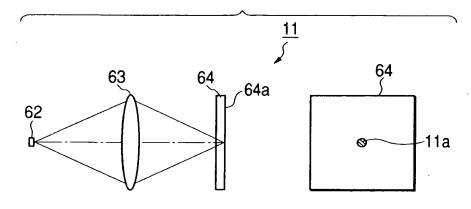


FIG. 9B





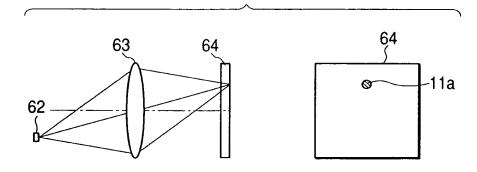


FIG. 9C

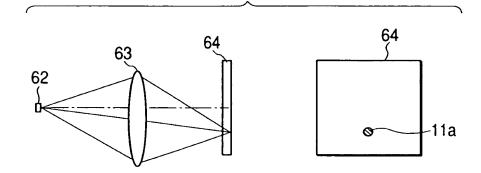


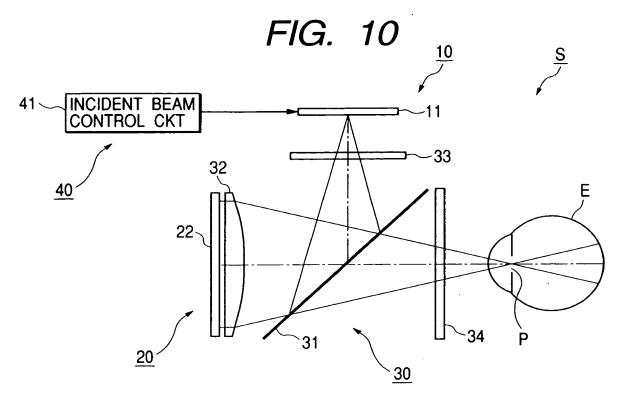


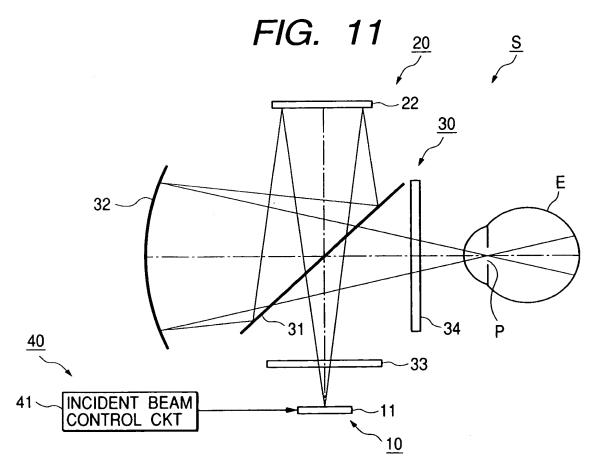

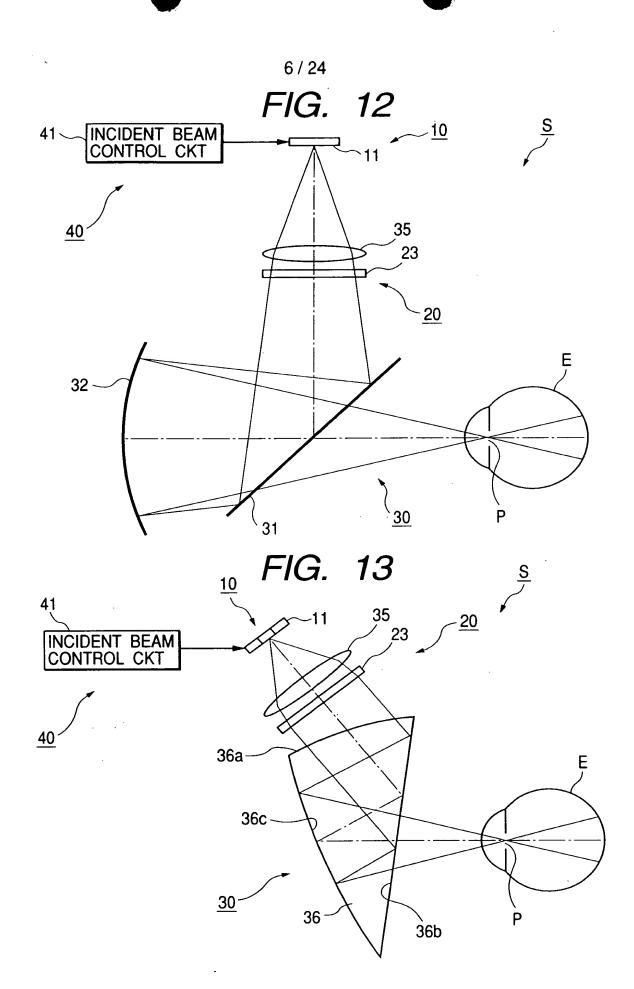

## FIG. 14

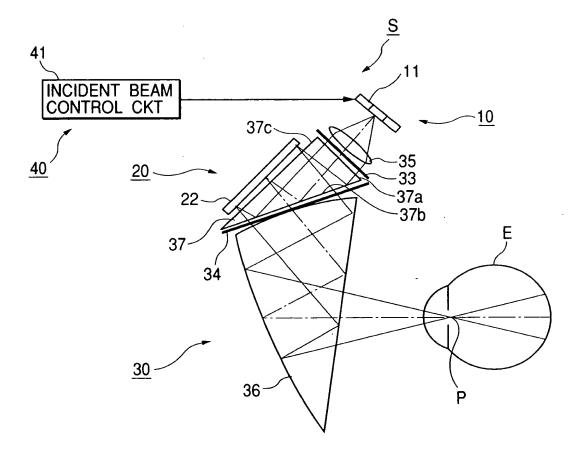

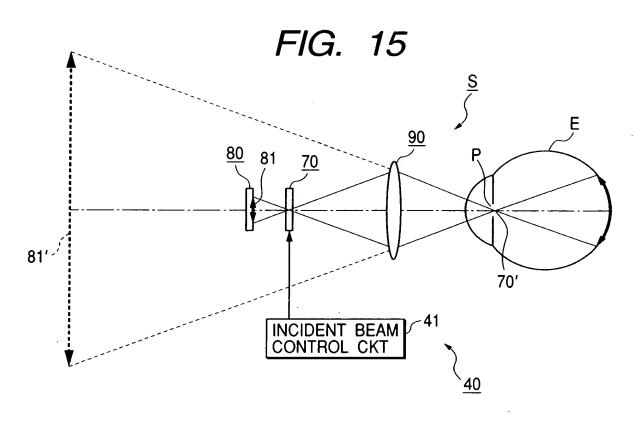

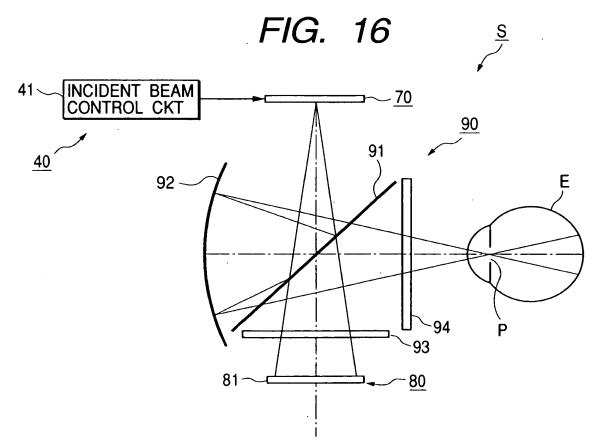


FIG. 17

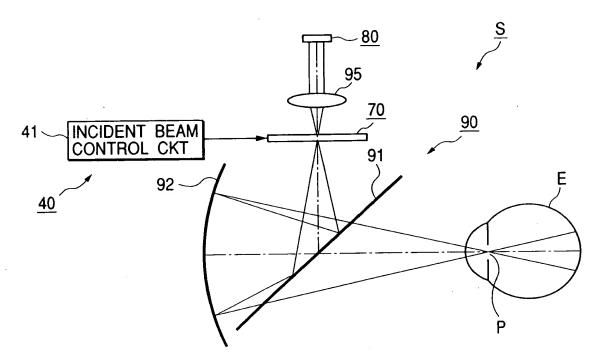


FIG. 18

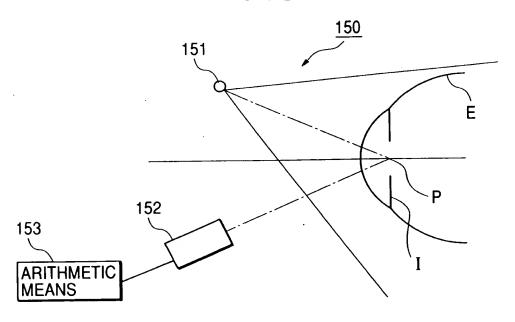


FIG. 19A



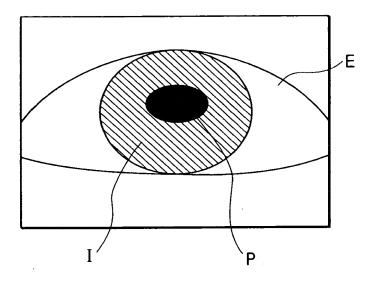


FIG. 19B

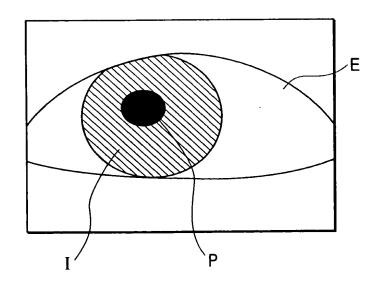

## FIG. 20A



## FIG. 20B




FIG. 21

10

11

20

Pa

11'(Pb)

CONTROL
MEANS

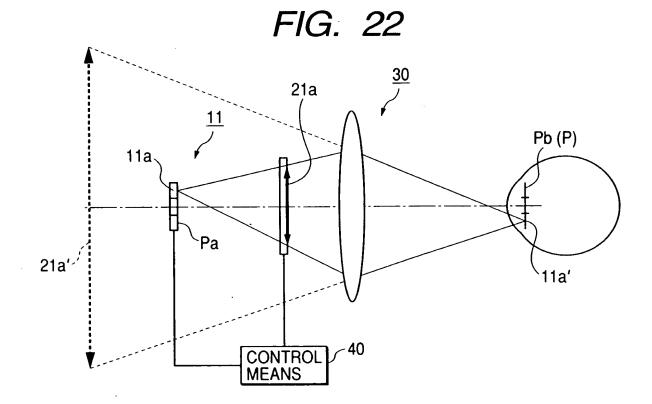


FIG. 23

21b

11b

Pa

CONTROL
MEANS

A0

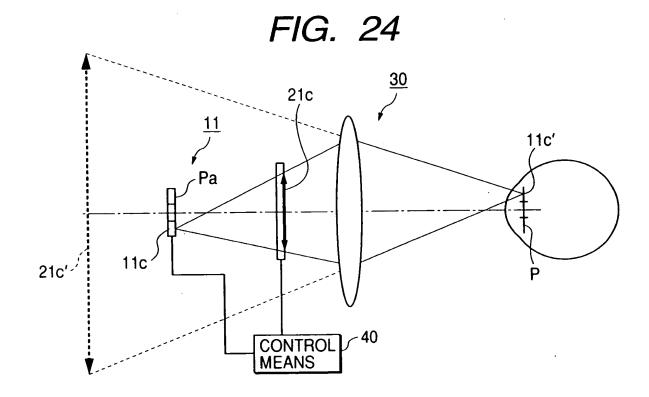


FIG. 25A

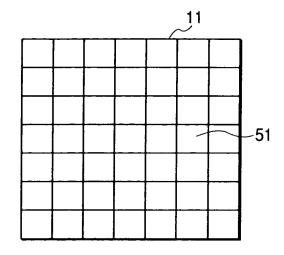
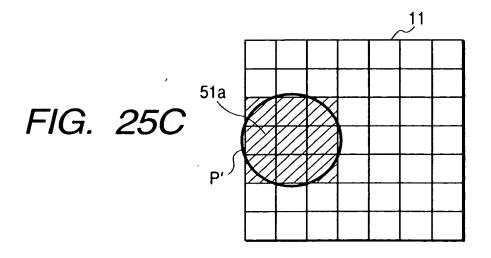



FIG. 25B 51a Pr





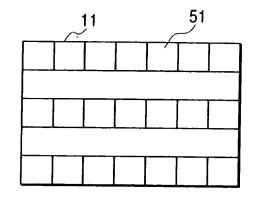


FIG. 26B

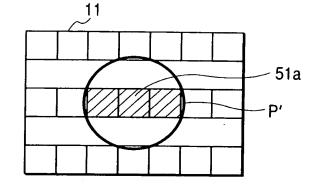
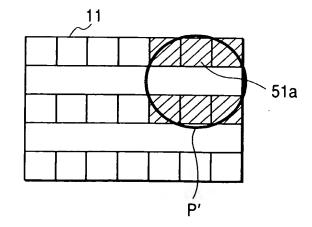


FIG. 26C



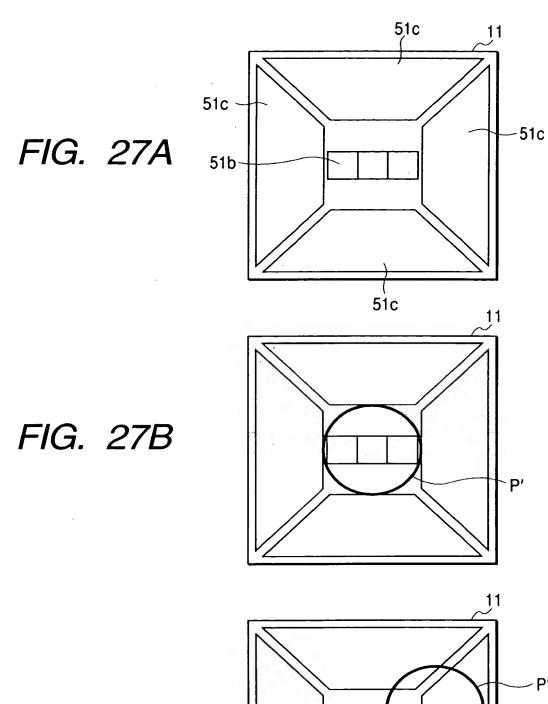


FIG. 27C

FIG. 28

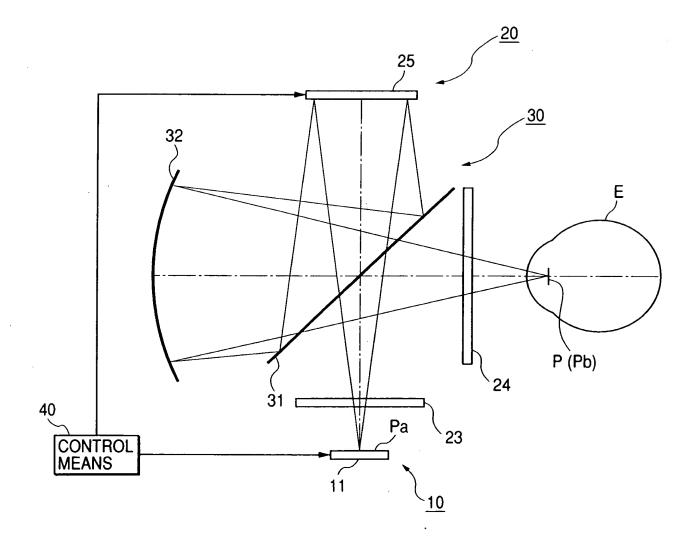


FIG. 29


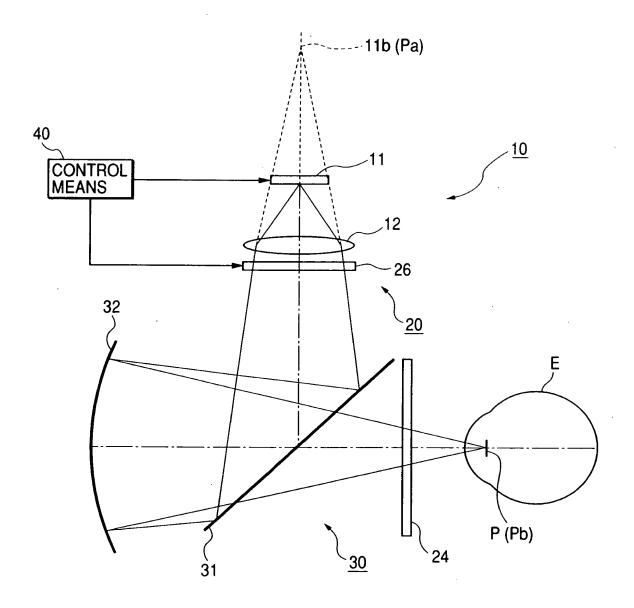


FIG. 30

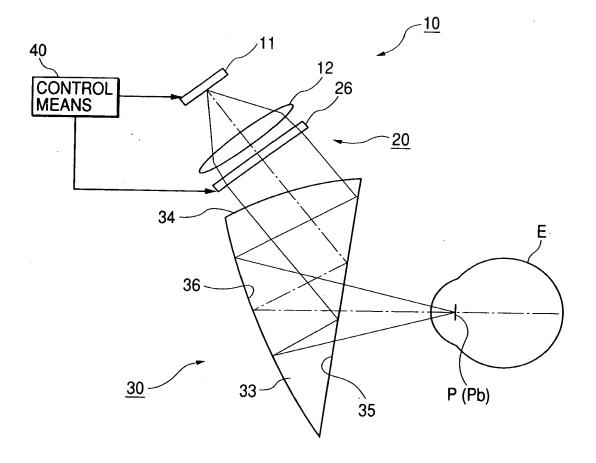

## FIG. 31




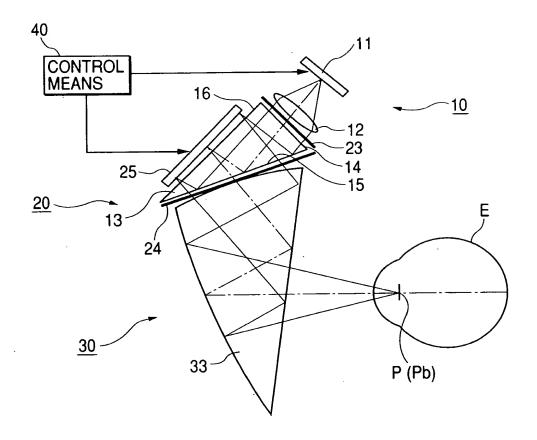


FIG. 32

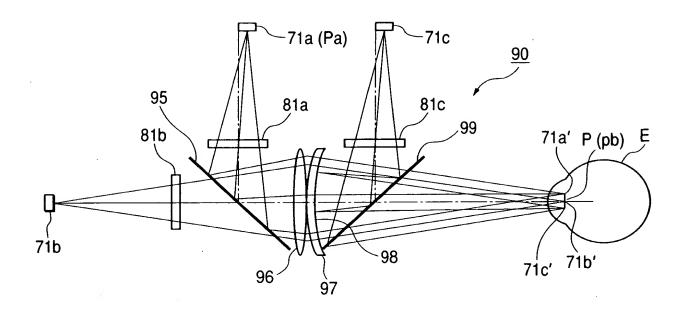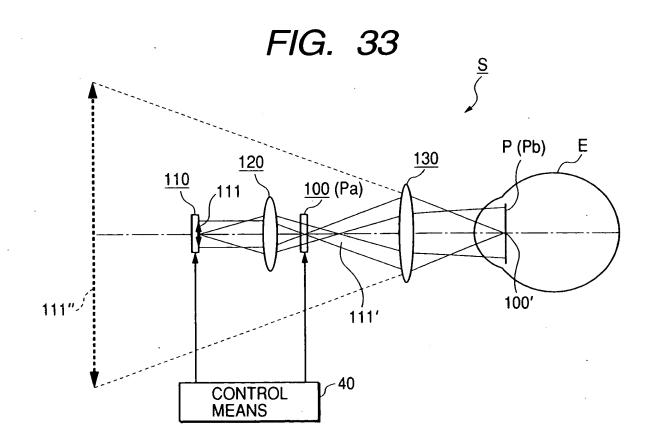

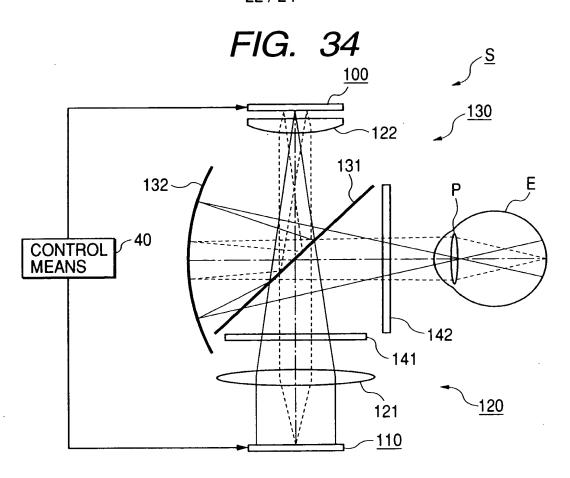

22 / 24



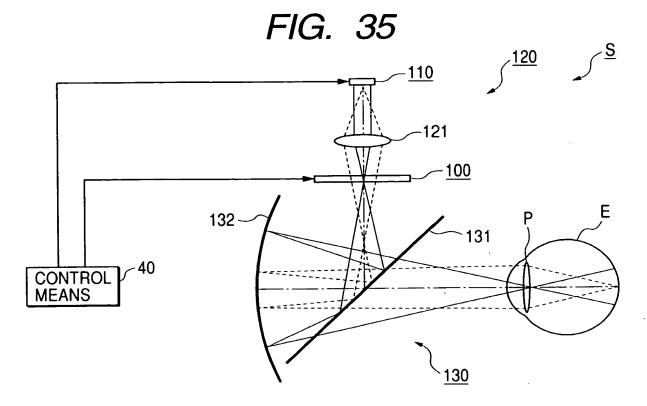


FIG. 36

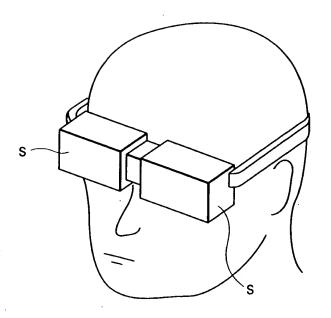


FIG. 37

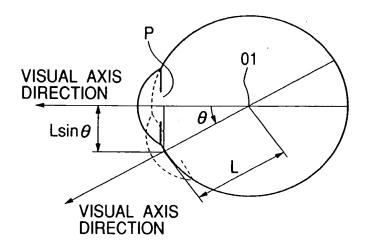


FIG. 38A

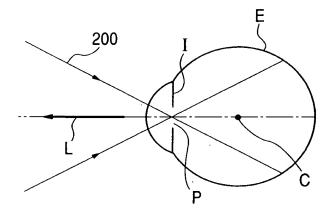


FIG. 38B

